



Sound functions: 48 & 830 class

Decoder address: _____

F0: Headlight (directional)

F1: ALCo 6-251B prime mover start-up and shutdown

F2: Horn long

F3: Coupler release and coupler crash

F4: Cab door closure

F5: Manual notching up

F6: Manual notching down

F7: Condensate release

F8: Air exhaust after prime mover shutdown

F9: Horn short

F10: Air brake release

F11: Aux 1 lighting

F12: Aux 2 lighting



Authorised reseller

www.dccsound.com

mike.dccsound@gmail.com

0487 475 222