

Sound functions – NSWGR 48 class



Decoder address: _____

- F0 Directional headlight
- F1** Prime-mover start-up & shut-down
- F2 Long horn
- F3 Coupler crash and release
- F4 Air exhaust after prime mover shutdown
- F5 *Drive hold (FT)*
- F6 *Brake application (FT)*
- F7 Condensate release valve
- F8 Cab door
- F9 Short horn
- F10 Curve squeal
- F11-14 Aux 1-4
- F15 Sanders



www.dccsound.com
mike.dccsound@gmail.com
0487 475 222