

Sound functions - VR F class



Decoder address: _____

- F0 Directional headlight
- F1** Prime-mover start-up & shut-down
- F2 Long horn
- F3 Coupler crash and release
- F4 Lube oil hand priming
- F5 *Drive hold (FT)*
- F6 *Brake application (FT)*
- F7 Shunting mode
- F8 Cold-start (activate before F1)
- F9 Short horn
- F10 Curve squeal
- F11-13 Aux 1-3
- F14 Cab door
- F15 Sandbox lid access
- F16 Taildisc

www.dccsound.com
mike.dccsound@gmail.com
0487 475 222