

## Sound functions: VR H class steam



Default decoder address: \_\_\_\_\_

- F0: Scrolling headlight and turbo-generator
- F1:** Mute/start-up
- F2: Medium whistle
- F3: Short whistle
- F4: Blow-down
- F5: *Heavy Load (FT)*
- F6: *Coast mode (FT)*
- F7: *Brake (FT)*
- F8: Coupler
- F9: Injector
- F10: Air pump
- F11: Coal shovelling
- F12: Long whistle

[www.dccsound.com](http://www.dccsound.com)

[mike.dccsound@gmail.com](mailto:mike.dccsound@gmail.com)

0487 475 222